

# Using the Speaker

To answer a call using the speakerphone, do not lift the handset and instead press the **Speaker** or **Answer** key.

---

🕒 Revision #1

★ Created Thu, Jan 16, 2020 1:11 PM by [Admin](#)

✎ Updated Mon, Feb 17, 2020 12:28 PM by [Admin](#)